


ADFS607

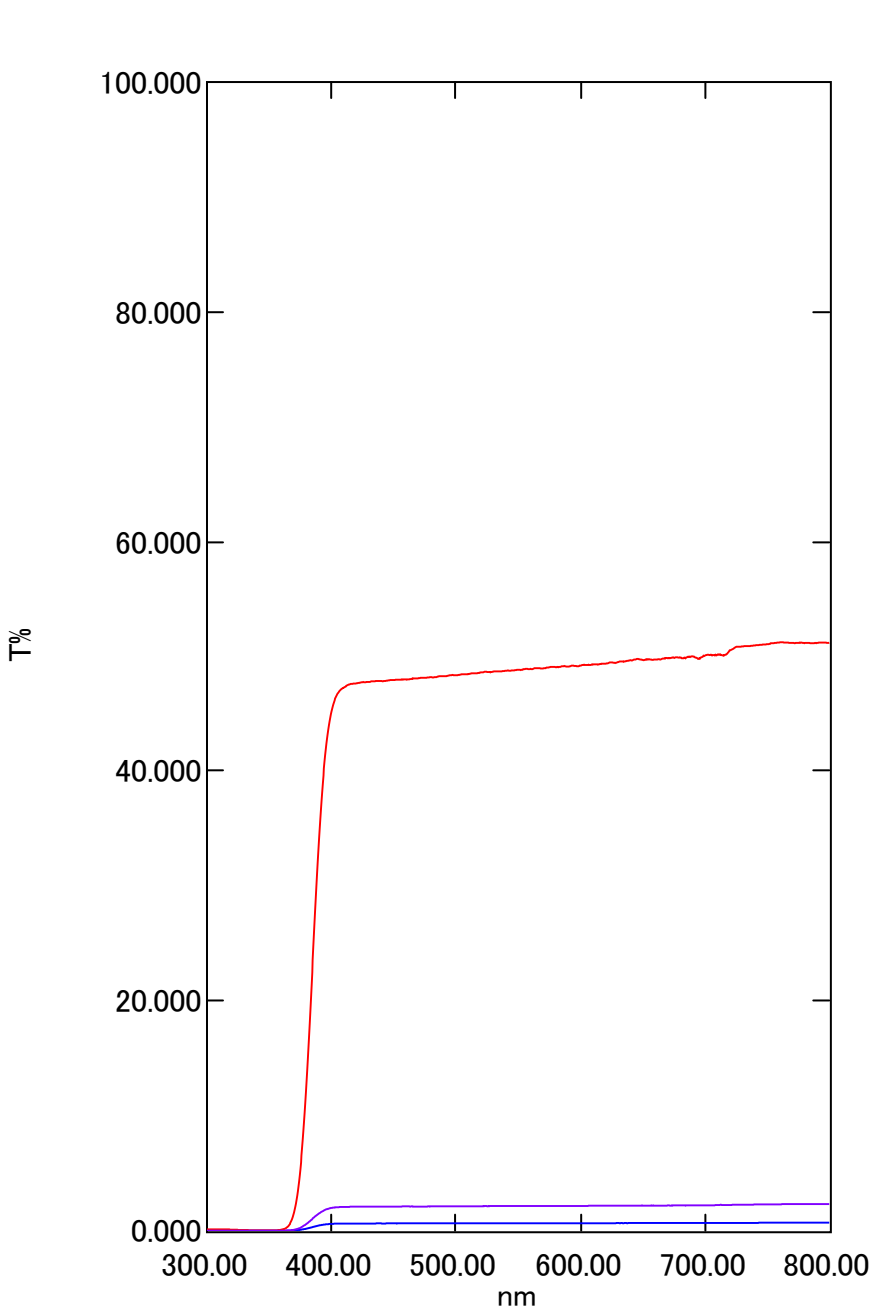

— ADFS607-0 - 0mm
— ADFS607-100 - 100mm
— ADFS607-50 - 50mm

波長 (nm)	0mm ...	50mm ...	100mm ...
300.00	0.116	0.008	0.004
310.00	0.117	0.006	0.000
320.00	0.089	0.004	0.001
330.00	0.050	0.003	0.002
340.00	0.029	0.002	0.001
350.00	0.022	0.001	0.002
360.00	0.085	0.004	0.002
370.00	1.594	0.078	0.023
380.00	12.947	0.592	0.176
390.00	34.069	1.500	0.449
400.00	45.211	1.977	0.590
410.00	47.292	2.065	0.617
420.00	47.649	2.082	0.625
430.00	47.768	2.087	0.626
440.00	47.854	2.094	0.627
450.00	47.950	2.099	0.628
460.00	47.990	2.106	0.633
470.00	48.099	2.101	0.632
480.00	48.188	2.108	0.633
490.00	48.268	2.114	0.636
500.00	48.348	2.116	0.635
510.00	48.456	2.122	0.638
520.00	48.594	2.126	0.638
530.00	48.669	2.135	0.641
540.00	48.740	2.137	0.643
550.00	48.816	2.139	0.644
560.00	48.902	2.146	0.648
570.00	48.954	2.147	0.645
580.00	49.061	2.152	0.648
590.00	49.109	2.150	0.649
600.00	49.201	2.155	0.652
610.00	49.283	2.167	0.650
620.00	49.357	2.164	0.654
630.00	49.488	2.175	0.657
640.00	49.658	2.173	0.656
650.00	49.693	2.188	0.664
660.00	49.723	2.184	0.662
670.00	49.832	2.188	0.659
680.00	49.927	2.194	0.659
690.00	49.996	2.199	0.658
700.00	50.044	2.204	0.669
710.00	50.136	2.242	0.676
720.00	50.522	2.240	0.672
730.00	50.858	2.260	0.676
740.00	50.951	2.273	0.682
750.00	51.062	2.287	0.686
760.00	51.203	2.295	0.693
770.00	51.179	2.309	0.692
780.00	51.156	2.306	0.700
790.00	51.162	2.318	0.700
800.00	51.193	2.327	0.697

[測定プロパティ]

波長範囲(nm): 300.00 ~ 800.00
 スキャン速度: 高速
 サンプルングピッチ: 0.5
 オート サンプルングピッチ: 有効
 測定モード: オート

[装置プロパティ]

装置の種類: UV-3600Plus シリーズ
 測光値: 透過率
 スリット幅: (20)
 時定数: 0.1 秒
 光源: 自動
 光源切替波長: 290.00 nm

.....