


ADFS705

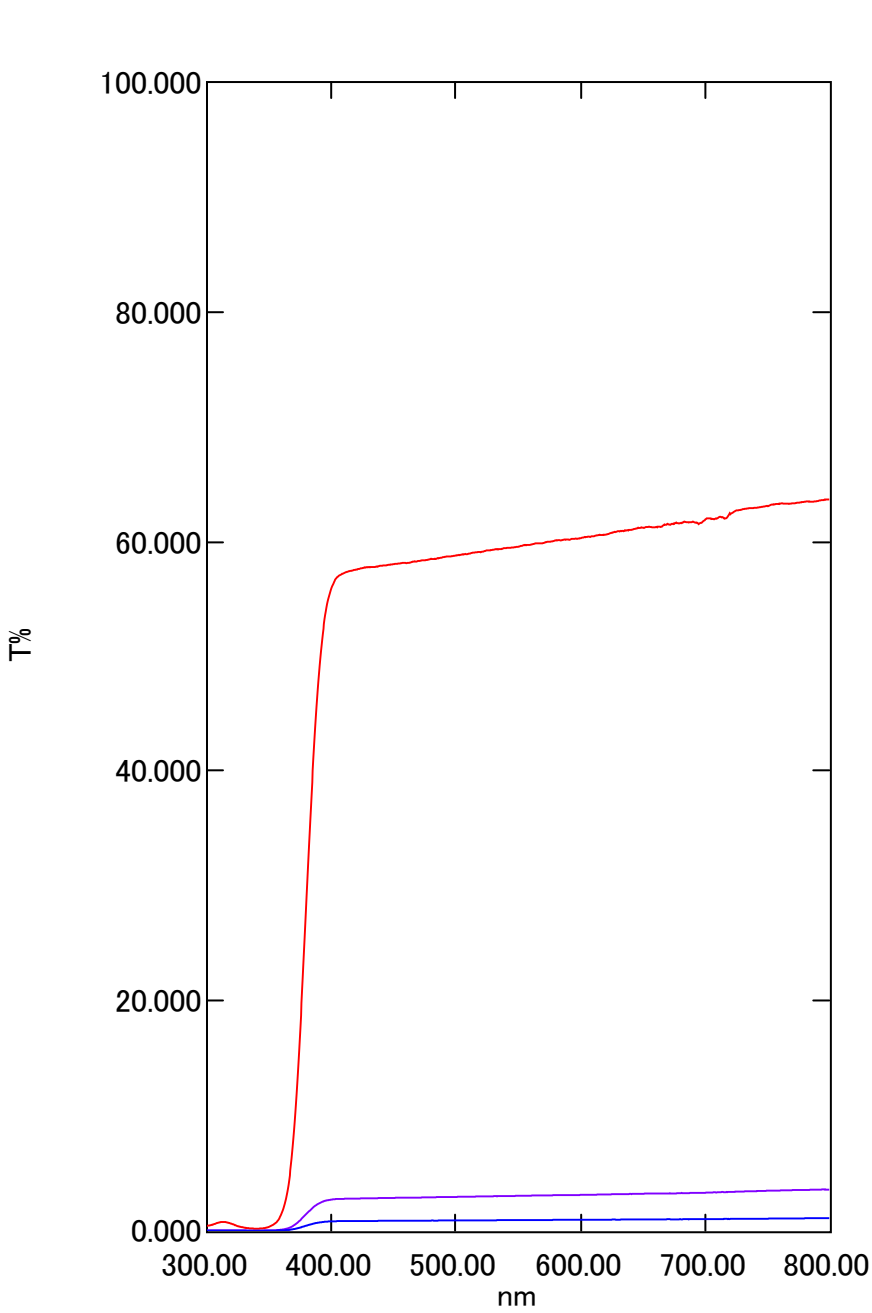

— ADFS705-0 - 0mm
— ADFS705-100 - 100mm
— ADFS705-50 - 50mm

波長 (nm)	0mm ...	50mm ...	100mm ...
300.00	0.421	0.024	0.006
310.00	0.723	0.038	0.010
320.00	0.589	0.031	0.009
330.00	0.264	0.014	0.005
340.00	0.176	0.011	0.003
350.00	0.340	0.019	0.007
360.00	1.498	0.083	0.026
370.00	8.760	0.470	0.141
380.00	29.034	1.475	0.441
390.00	48.534	2.372	0.707
400.00	55.959	2.703	0.811
410.00	57.246	2.771	0.832
420.00	57.557	2.793	0.839
430.00	57.765	2.810	0.847
440.00	57.887	2.835	0.854
450.00	58.024	2.853	0.862
460.00	58.122	2.874	0.868
470.00	58.300	2.882	0.869
480.00	58.487	2.899	0.878
490.00	58.633	2.918	0.885
500.00	58.788	2.936	0.885
510.00	58.917	2.952	0.891
520.00	59.072	2.981	0.898
530.00	59.282	2.994	0.903
540.00	59.428	3.008	0.908
550.00	59.537	3.027	0.913
560.00	59.728	3.049	0.920
570.00	59.859	3.067	0.928
580.00	60.101	3.083	0.936
590.00	60.173	3.095	0.937
600.00	60.291	3.111	0.940
610.00	60.450	3.133	0.950
620.00	60.586	3.150	0.957
630.00	60.898	3.173	0.960
640.00	61.014	3.196	0.970
650.00	61.204	3.215	0.975
660.00	61.243	3.228	0.984
670.00	61.525	3.242	0.990
680.00	61.589	3.265	0.990
690.00	61.694	3.285	0.996
700.00	61.835	3.294	1.012
710.00	62.020	3.331	1.016
720.00	62.453	3.365	1.014
730.00	62.793	3.405	1.023
740.00	62.938	3.438	1.036
750.00	63.098	3.474	1.044
760.00	63.277	3.495	1.058
770.00	63.314	3.525	1.065
780.00	63.456	3.544	1.073
790.00	63.504	3.572	1.084
800.00	63.668	3.580	1.091

[測定プロパティ]

波長範囲(nm): 300.00 ~ 800.00
 スキャン速度: 高速
 サンプルングピッチ: 0.5
 オート サンプルングピッチ: 有効
 測定モード: オート

[装置プロパティ]

装置の種類: UV-3600Plus シリーズ
 測光値: 透過率
 スリット幅: (20)
 時定数: 0.1 秒
 光源: 自動
 光源切替波長: 290.00 nm

.....