


石英NDフィルター 25%

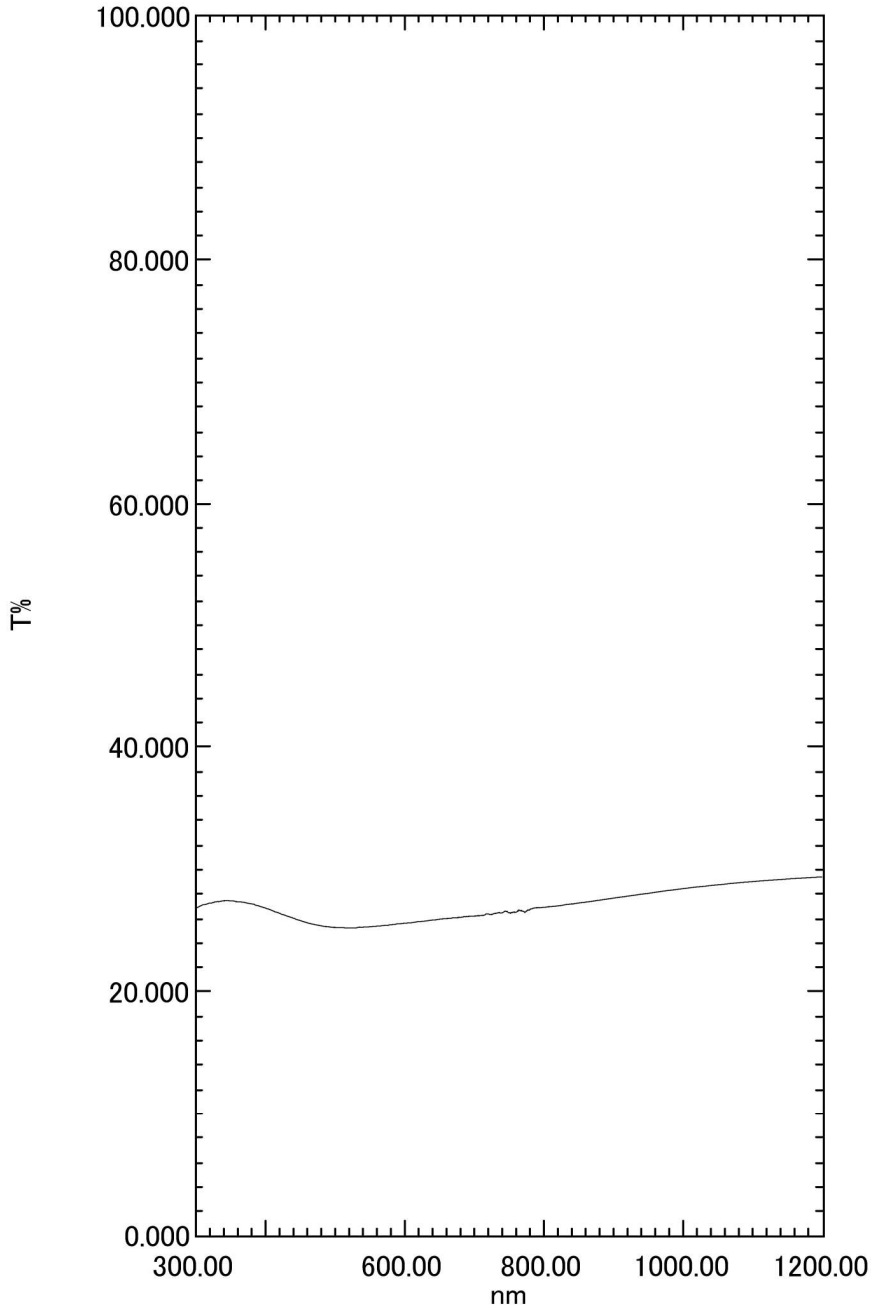

波長 (nm)	RawData ...
300.00	26.795
320.00	27.224
340.00	27.417
360.00	27.335
380.00	27.166
400.00	26.825
420.00	26.398
440.00	25.996
460.00	25.622
480.00	25.367
500.00	25.235
520.00	25.193
540.00	25.253
560.00	25.341
580.00	25.457
600.00	25.579
620.00	25.713
640.00	25.847
660.00	25.960
680.00	26.050
700.00	26.163
720.00	26.352
740.00	26.434
760.00	26.477
780.00	26.670
800.00	26.888
820.00	27.000
840.00	27.163
860.00	27.308
880.00	27.470
900.00	27.637
920.00	27.794
940.00	27.955
960.00	28.111
980.00	28.269
1000.00	28.412
1020.00	28.551
1040.00	28.667
1060.00	28.784
1080.00	28.896
1100.00	28.988
1120.00	29.081
1140.00	29.158
1160.00	29.241
1180.00	29.312
1200.00	29.371