


ND40AH

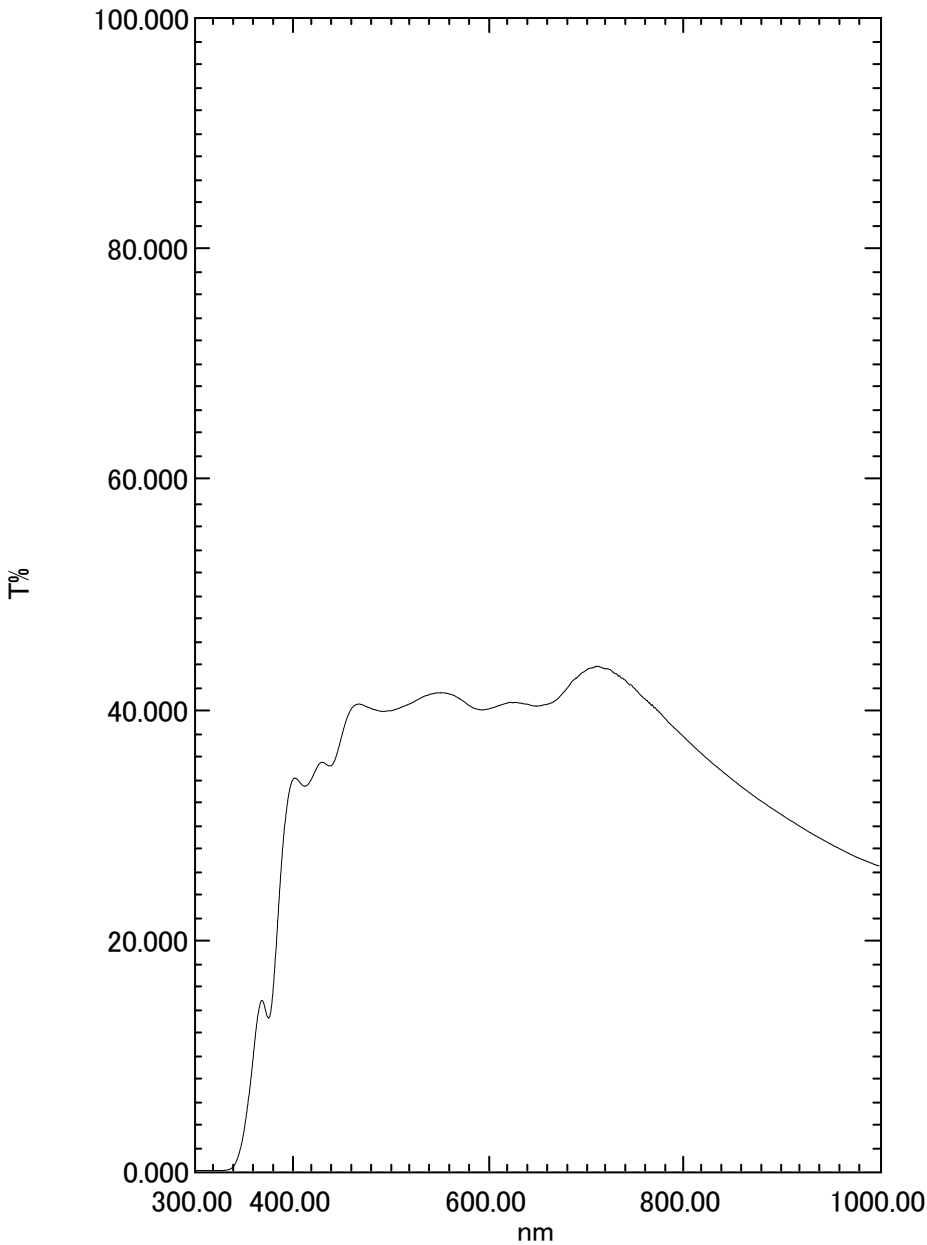

[測定プロパティ]  
 波長範囲(nm): 300.00 ~ 1000.00  
 スキャン スピード: 中速  
 サンプルングピッチ: 0.5  
 オート サンプルングピッチ: 有効  
 測定モード: オート

[装置プロパティ]  
 装置の種類: UV-3600Plus シリーズ  
 測光値: 透過率  
 スリット幅: (20)  
 時定数: 0.1 秒  
 光源: 自動  
 光源切替波長: 282.00 nm  
 .....

波長 (nm)	RawData ...
300.00	0.001
310.00	0.000
320.00	0.001
330.00	0.011
340.00	0.442
350.00	3.422
360.00	10.296
370.00	14.564
380.00	15.843
390.00	28.341
400.00	33.903
410.00	33.420
420.00	34.133
430.00	35.414
440.00	35.182
450.00	37.703
460.00	40.072
470.00	40.440
480.00	40.080
490.00	39.860
500.00	39.891
510.00	40.163
520.00	40.507
530.00	40.946
540.00	41.302
550.00	41.453
560.00	41.346
570.00	40.961
580.00	40.366
590.00	40.008
600.00	40.038
610.00	40.316
620.00	40.584
630.00	40.596
640.00	40.445
650.00	40.308
660.00	40.454
670.00	40.875
680.00	41.786
690.00	42.747
700.00	43.416
710.00	43.736
720.00	43.528
730.00	43.110
740.00	42.548
750.00	41.797
760.00	40.949
770.00	40.157
780.00	39.268
790.00	38.414
800.00	37.604
810.00	36.806
820.00	36.010
830.00	35.274
840.00	34.581
850.00	33.895
860.00	33.218
870.00	32.596
880.00	31.993
890.00	31.415
900.00	30.858
910.00	30.318
920.00	29.790
930.00	29.270
940.00	28.795
950.00	28.328
960.00	27.885
970.00	27.456
980.00	27.065
990.00	26.721
1000.00	26.429